

10. If the fuel tank has been drained, fill the tank and start the engine. Check that the engine oil pressure and ignition warning lamps are not illuminated. Also, check for coolant, oil or fuel leaks.

Note

If the brake pressure warning panels illuminate refer to Chapter G immediately.

11. Check the operation of all controls, instruments, warning panels, lamps and accessories.