



Components

- 4 4 in 1 instrument
- 5 Ignition switch
- 17 Fuseboard
- 55 Left-hand 'A' post earth
- 59 Washer fluid level amplifier
- 77 Speedometer
- 192 Drivers door - Drivers window lift switch
- 193 Drivers door - Left-hand rear window lift switch
- 194 Drivers door - Passengers window lift switch
- 195 Drivers door - Right-hand rear window lift switch

- 196 Drivers door - Window lift master switch
- 197 Window lift relay
- 198 Left-hand rear door window lift switch
- 199 Front passengers door window lift switch
- 200 Right-hand rear door window lift switch
- 201 Drivers door window lift motor
- 202 Left-hand rear door window lift motor
- 203 Front passengers door window lift motor
- 204 Right-hand rear door window lift motor