

Key to 30-4

Component location


 [007253](#)

Wiring diagram

 [007254](#)


- 1) Air horns compressor - when fitted
- 2) Air horns - when fitted
- 3) Engine compartment earth point - front left-hand side
- 4) Windtone horns. Bentley Continental R and Azure cars only
- 5) Windtone horns. Four door cars other than those conforming to a USA, Canadian or Middle East specification
- 6) Splice A
- 7) Air horns relay or relay base
- 8) Windtone horns relay
- 9) Main loom to valance loom plug and socket 18-way - left-hand 'A' post
- 10) Centre console switch panel plug and socket 6-way
- 11) Printed circuit board connection
- 12) Horns change-over switch - when fitted
- 13) Splice B
- 14) Main loom to valance loom plug and socket 7-way - left-hand 'A' post
- 15) Main fuseboard F2, fuse B2, 20 amp
- 16) Main fuseboard F1, fuse A8, 10 amp
- 17) Splice C. Right-hand drive cars Splice D. Left-hand drive cars
- 18) Main loom to valance loom plug and socket 24-way - left-hand 'A' post
- 19) 'A' post earth points
- 20) Steering column earth point
- 21) Carbon brush contact - steering wheel
- 22) Horns push button switch
- 23) Splice E
- 24) Link loom connector - steering wheel
- 25) Main loom to contact ring connector
- 26) Main loom to steering column connector
- 27) Splice F
- 28) Windtone horns. Four door cars conforming to a USA, Canadian or Middle East specification
- 29) Splice G

Note:

 [003363](#)

Cable route on cars fitted with air horns

Note:

 [003364](#)

Cable route on cars other than those fitted with air horns