WORKSHOP MANUAL C ELECTRICAL 90-91 TOOLS ELECTRICAL 92-93 ELECTRICAL 94-96 PARTS CATALOGUE 04 ELECTRICAL 97-98

Suction throttling valve

Applicable to

Rolls-Royce Silver Shadow Silver Shadow Long Wheelbase Silver Wraith II Phantom V and VI

Bentley

T Series between car serial numbers SBX 1001 to SRX 30000

Introduction

The suction throttling valve fitted as original equipment and the unit which was supplied as a replacement are no longer available.

Description

This Product Support Information Sheet describes the procedures for fitting a kit of parts for servicing all motor cars in the above car serial number range.

Procedure

- 1.) Remove the suction throttling valve as described in TSD 2476 Workshop Manual, Section C.
- 2.) Dismantle the suction throttling valve and discard the following items (see fig. *C9-1*
 - 001632

C9-1 Suction throttling valve

1	Pressure adjusting nut			
2	Centre spindle			
3	Screw			
4	Valve cover			
5	Rivet			
6	Operating arm			
7	Operating arm springs			
8	Main spring seat			
9	Main spring			
10	Locating spring			
11	Regulating spring seat			
12	Regulating spring			
13	Spacing washer			
14	Main spring seat			
15	Piston and diaphragm assembly			
16	Filter screen			
17	Filter screen retainer			
18	Valve body			
19	Valve cap (if fitted)			
20	Schrader valve (if fitted)			
21	Schrader valve adapter (if fitted)			
22	Sealing ring			
23	Charging pipe			
24	Сар			

C9-1). Schrader valve (Bleed line) Piston and diaphragm Main spring and spring seat Pressure adjusting nut Centre

```
19/03/05 TSD 6000 1990 - 2000 [English] / Suction throttling valve Page 2
```

(OID = <130101_1_1> UID = <1821 130101> Dataset = <TSD 6000 1990 - 2000 [English]>)

spindle Operating arm and arm springs

- 3.) Discard the actuator crank lever and the link rod from the suction throttling valve.
- 4.) Lightly coat the gasket which is provided with refrigerant oil, fit the gasket, blanking plate, valve cover and secure with the screws from the diaphragm cover.
- 5.) Refit the modified suction valve onto the vehicle as described in TSD 2476 Workshop Manual, Section C
- 6.) Using the metal clip, secure the sensor tubes from the thermostat and expansion valve to the low pressure outlet pipe and wrap the sensor tubes with the insulation tape provided (see fig. *C9-2*

001633

C9-2 Evaporator pipes and suction throttling valve C9-2).

- 7.) Mount the thermostat in a suitable position on the left-hand valance (the position will be determined by the length of the sensor tube) with self-tapping tubes.
- 8.) Connect the original wire from the compressor to the terminal (marked cut in) of the thermostat using the terminal provided.
- 9.) Connect the link loom to the terminal of the compressor and to the terminal (marked cut out) of the thermostat using the terminal provided.
- 10. Evacuate the system and recharge as described in TSD 2476 Workshop Manual, Section C.

Parts affected

Displaced part number Description Quantity New part number

		-	
CD 4900	Kit-Suction	1	CD 6687
RH 9805	throttling		
UD 11429	valve		

Vic Ward